

Starspot™ 500 Surface Range

Installation instructions for JC14158 & JC14159 Starspot 500 Surface



Warnings & Cautions

- To avoid electric shock, serious injury or property damage, isolate power before installing, removing or servicing the product.
- It is recommended that luminaires are installed by a qualified electrician to ensure the installation complies with the local current wiring regulations.
- Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for claims arising from sub-standard installations; which will void the warranty.
- This product is designed for connection to a 100-240V~ 50/60Hz.
- Do not carry out insulation tests with the product connected to the circuit.
- It may be necessary to upgrade your MCBs to allow for increased inrush current.
- The light source of this luminaire is not replaceable: when the light source reaches the end of its life the whole of the luminaire must be replaced.
- This product is suitable for indoor use only.
- It is recommended that the ambient room temperature should not exceed 30°C.
- Read instructions and check that you have all of the tools and accessories required to complete the installation correctly. Isolate power supply before starting installation.


INSTALLATION

ENGLISH

JC14158	
Light source:	Integral LED
Total circuit Wattage:	7W
Beam angle:	40°
Luminous flux:	480 lumens
Efficacy:	68 LpcW
Colour temp:	4000K
Ra:	85

JC14159	
Light source:	Integral LED
Total circuit Wattage:	7W
Beam angle:	40°
Luminous flux:	450 lumens
Efficacy:	64 LpcW
Colour temp:	3000K
Ra:	85


100-240V~ 50/60Hz - Class I

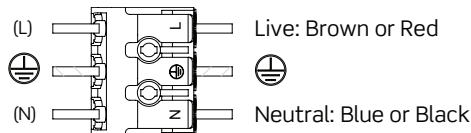

Installation Procedure

1. Remove the surface mounting plate from the fitting by removing the two securing screws on opposite sides of the side of the body.
2. Use the bracket as a template to mark holes for fixings.
3. Fix bracket using the fixings supplied.
4. Terminate wiring as shown above.
5. Align the holes on the side of the body with the mounting bracket and secure using machined screws.
6. Turn on power supply and test operation of the luminaire.

Note: adjustment to the beam direction while the luminaire is operational should be carried out with care as it can get hot during service.

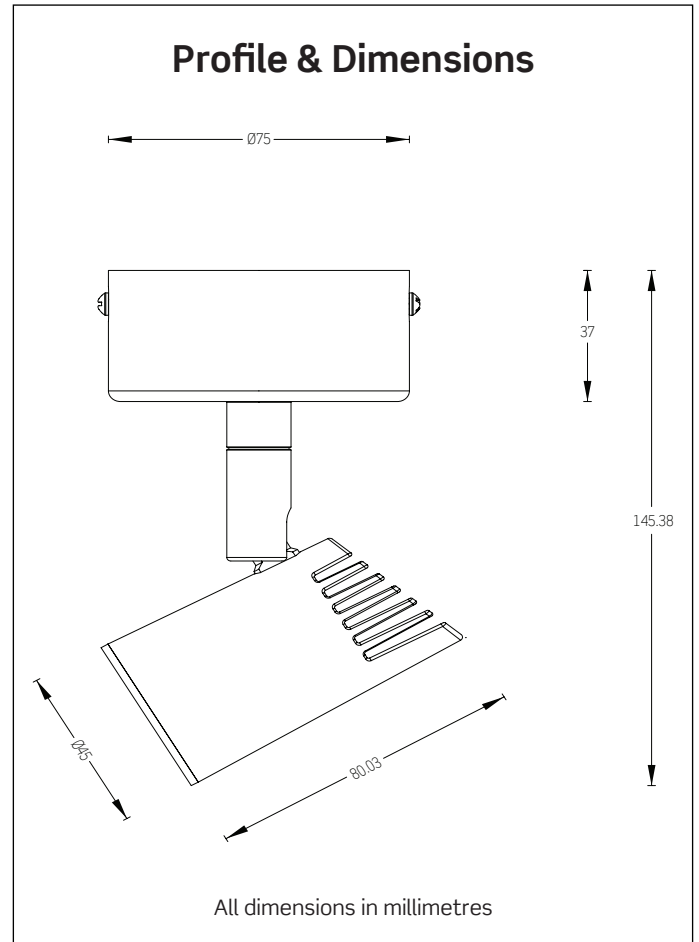

CE RoHS Compliant IP20 jcc.co.uk

Important warranty information

This product is supported by a 2-year standard warranty which will extend to 5-years if registered within the first year of purchase. Please register at jcc.co.uk/warranty (Terms and conditions apply).

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis: Product Code/Date Code.

BS EN ISO9001 - 2015 - Registered Firm Certificate No. GB 1552

JCC Lighting Products Ltd. Innovation Centre, Beeding Close, Southern Cross Trading Estate, Bognor Regis, West Sussex, PO22 9TS, United Kingdom

Technical Support: +44(0)1243 838986 Customer Services: +44(0)1243 838999

V4_Nov_2019_GL