

STARSPOT™ 500 SURFACE

JC14162

Surface Spotlight

Light source: Integral LED
 Total circuit Wattage: 3 x 7W
 Beam angle: 40°
 Luminous flux: 1440 lumens
 Efficacy: 68 LpcW
 Colour temp: 4000K
 Ra: 85

JC14163


Surface Spotlight

Light source: Integral LED
 Total circuit Wattage: 3 x 7W
 Beam angle: 40°
 Luminous flux: 1350 lumens
 Efficacy: 64 LpcW
 Colour temp: 3000K
 Ra: 85

Available finishes: satin chrome and white

100-240~50/60Hz / Class I 

Fig1.

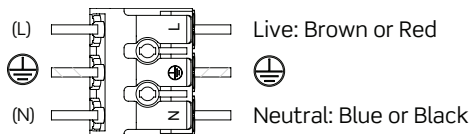

CE RoHS Compliant   **IP20**

BS EN ISO9001 - 2008
 Registered Firm Certificate No. GB 1552
 Drg No. JC14162-IS Issue: C - 03.11.15 - RCS

Installation Sheet

Please read these instructions before installation and retain for future reference

Important Information

- It is recommended that luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2008 & local building control.
- These products are designed for connection to a 100-240V 50/60Hz supply.
- Any broken or damaged parts should be replaced as soon as possible.
- JCC will not accept responsibility for any claims arising from a poor installation.
- The light source of this luminaire is not replaceable: when the light source reaches its end of life, the whole of the luminaire must be replaced.**

Important User Advice

- It is recommended that the ambient room temperature should not exceed 30°C.
- Ensure that there is adequate free air ventilation around the fitting.
- The installation must not infringe on water pipes or any other electrical services.
- It may be necessary to uprate your MCBs to allow for increased inrush current.
- Always switch off mains supply before fitting or servicing.
- This luminaire is suitable for indoor use only.

Installation

- Remove the surface mounting plate from the fitting by removing the 2 captive nuts on the front of the body.
- Use the bracket as a template to mark holes for fixings.
- Fix bracket using fixings supplied
- Terminate wiring as shown in fig. 1. on the left.
- Align the holes on the side of the body with the threaded bars and secure using the captive nuts.
- Turn on power supply and test operation of the luminaire.
- Note: adjustment to the beam direction while the luminaire is operational should be carried out with care as it can get hot during service.

Warranty 2 Year as standard

10 year domestic extended warranty available (online registration required) Please visit: jcc.co.uk/warranty. Prior to registration the installer is asked to provide the following information directly from the luminaire:

Product code:
 Batch number:

The approved electrical installer must give details of their Part P registration when installing products in domestic applications.

jcc.co.uk

Profile & Dimensions

