
| | Installation Sheet Important Information | | | | | | | |
|--|--|--|--|--|--|--|--|--|
| JCC a LEVITON. company | | | | | | | | |
| SKYTILE® SENSE | Please read these instructions before installation and retain for future reference. It is recommended that luminaires are installed by a qualified electrician to ensure the installation complies with the current local wiring regulations. Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for claims arising from sub-standard installations. This product is for indoor use only, and should not be covered by any insulated material. The light source of this luminaire is not replaceable: when the light source reaches its end of life, the whole of the luminaire shall be replaced. Note: DO NOT carry out insulation tests with the driver connected to the circuit. The external flexible cable cord of this luminaire cannot be replaced: if the cord is damaged the luminaire should be decommissioned and destroyed. | | | | | | | |
| JC71276DH 600 X 600 LED PANEL Light source: Integral LED | Installation Note Maximum recommended installation height 2.8 metres. Daylight harvesting function varies on reflectance of surface below the panel. Typically panels are effective up to 6 metres away from natural daylight source. Daylight panels must have 1200mm x 1200mm (2 X 2 panels) or 1800mm x 1200mm (3 x 2 panel) spacing in order for them to work effectively. It may be necessary to uprate your MCBs to allow for increased inrush current. | | | | | | | |
| Total circuit Wattage: 28W Luminous flux: 3000 lumens Efficacy: 107 LpcW Colour temp: 4700K | Read instructions and check you have all the tools and accessories required to complete the installation correctly. Isolate power supply before starting the installation. | | | | | | | |
| Ra: 80 | Remove the ceiling tile from the location where you wish to install the LED Panel. Connect the LED driver to the mains supply. Refer to Fig.1 for details. | | | | | | | |
| | 3. Select daylight harvesting settings on driver before attaching to LED panel (see page 2 for details). | | | | | | | |
| Driver | 4. Remove silicone bung from underside of LED panel (Fig.3). | | | | | | | |
| 220-240V 50/60Hz / Class II 🔲 | 5. Place LED panel halfway into the ceiling aperture then fit the driver in the recess on back of LED panel (Fig.5). Magnets will secure driver in position as shown in Fig.5. | | | | | | | |
| Fig. 1 Mains Input Cable | 6. Reconnect mains power supply. | | | | | | | |
| Neutral: Blue Live: Brown | Fig.3 Fig.4 Fig.5 | | | | | | | |
| 730mA/30-50V DC / Class III 🐵 | microwave | | | | | | | |
| Fig. 2: Plug & Play Connectors | Magnet Magnet | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| BS EN ISO9001 - 2008 Registered Firm Certificate No. GB 1552 Drg No. JC71276DH-IS Issue: C - 24.01.17 - KB | jCC.co.uk | | | | | | | |

JCC Lighting Products Ltd. • Innovation Centre • Beeding Close • Southern Cross Trading Estate • Bognor Regis • West Sussex • PO22 9TS


Technical Support: 01243 838986 Customer Services: 01243 838999

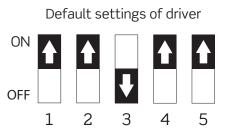

Default setting are: 500Lux, 25% and daylight harvest active.

| | Target Illumination | | | Minimum Hold Level | | | Daylight Harvest | | |
|--|------------------------|----|--------------------|-----------------------|----|----------|---------------------|----|----------|
| | | 1 | 2 ON – ON | | 3 | 4 | 5 | | |
| | 500Lux | ON | | OFF | ON | ON ON | | | |
| | 400Lux | ON | | | | | | ON | Active |
| | 300Lux | - | | 25% | - | | - | | Disabled |
| | 150Lux | _ | - | 50% | - | - | - | - | |

Profile & Dimensions

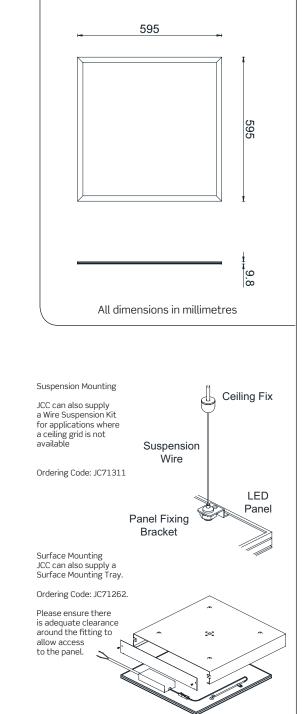

Target Illumination (1&2)

l: 500Lux ll: 400Lux lll: 300Lux lV: 150Lux Minimum Hold Time (3&4) 1: OFF 11: 25%

Ⅲ: 50%

Note: Set to OFF the panel light will switch off if natural light gets the closest value. 25% and 50% level : which is the minimum level the panel will go down to rather that switching off. If you select 150LUX ,you only can set Dim Level OFF and 25%.

Daylight Harvest (5)

I: Active II: Disable

Note:

Application

Corridors/Storage Areas

General Recreation Areas

General Office Applications

Office work with computers,

Retail, Schools and Workshops

Active: Daylight harvesting is active. Disable: It's just a normal driver.

Recommended


LUX Level

150

300

400

500

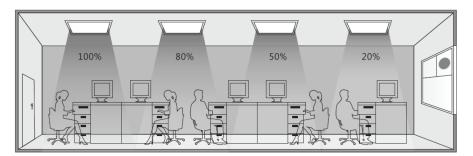

*All LED panel lights automatically adaptive dim according to natural light.

Important Warranty Information

Skytile® is supported by a 2 year on site warranty, plus our 5 year extended commercial warranty, to provide a total of 7 years of assured quality and performance. (2 year on site warranty applies from date of purchase for UK installations only)

Please register at jcc.co.uk/warranty; The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis:

Product Code Batch Code.