

ToughLED™ Anti-Corrosive

JC71505

5ft Single

Light source: Integral LED Total circuit Watts: 49W Luminous flux: 4500 lumens Efficacy: 92 LpcW Colour temp: 4000K

Ra: 80

JC71506

6ft Single

Light source: Integral LED Total circuit Watts: 61W Luminous flux: 5400 lumens Efficacy: 89LpcW Colour temp: 4000K Ra: 80

JC71507

5ft Twin

Light source: Integral LED Total circuit Watts: 98W Luminous flux: 9000 lumens Efficacy: 92 LpcW Colour temp: 4000K

Ra: 80

JC71508


6ft Twin

Light source: Integral LED Total circuit Watts: 118W Luminous flux: 10800 lumens Efficacy: 92LpcW Colour temp: 4000K Ra: 80

240V~ 50Hz

 Class I











BS EN ISO9001 - 2008 Registered Firm Certificate No. GB 1552 Drg No. JC71505-IS Issue: C - 03.12.15 - RCS

Installation Sheet

Please read these instructions before installation and retain for future reference

Important Information

 
It is recommended that luminaires are fitted by a qualified electrician to ensure that the installation complies with the current IEE wiring regulations BS7671: 2008. Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for any claims arising from a sub-standard installation. The light source of this luminaire is not replaceable: when the light source reaches its end of life, the whole of the luminaire shall be replaced.

Important User Advice

Always switch off mains supply before fitting or servicing. This luminaire is suitable for indoor and outdoor use.

Installation Procedure






- 1. Mark and drill mounting holes for the snap-in ceiling clips at the correct spacing for the version being installed. Maximum/Minimum spacing for
- 2. Affix clips securely to ceiling.
- 3. Clip the luminaire into place and ensure that it is secure before proceeding.
- 4. To gain access to the interior of the luminaire loosen the clips that secure the diffuser to the base section. Four of the clips are fitted with locking screws that will need to be loosened first. Two clips remain permanently attached to prevent the diffuser from falling.



 5. Separate the LED plate from the base by squeezing the securing clips inwards and pulling the plate away from the base. As with the diffuser there are permanent restraints that prevent the plate from falling during installation and servicing.




6. Wire the mains input supply to the fused terminal block as per the diagram to the left of the page. This is a Class I product and as such should always have an earth connection. Connect batteries.

ICC.co.uk

Profile & Dimensions

Single

Twin

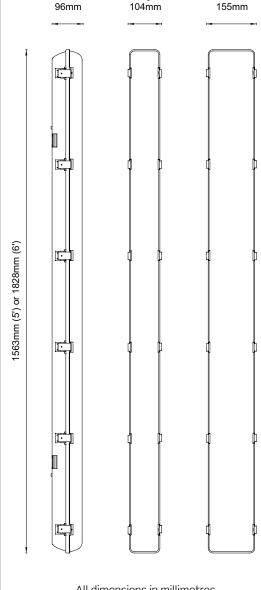

All dimensions in millimetres