Skytile® Direct/Indirect

Installation guide for Skytile® recessed LED panels



Important information

- It is recommended that luminaires are installed by a qualified electrician to ensure the installation complies with the local current wiring regulations.
- Any broken or damaged parts should be replaced as soon as possible.
 JCC will not accept responsibility for claims arising from sub-standard installations.
- This product is for indoor use only and should not be covered by any insulated material.
- The light source of this luminaire is not replaceable: When the light source reaches the end of it's life, the whole of the luminaire must be replaced.
- It may be necessary to upgrade your MCBs to allow for increased inrush current.

INSTALLATION

ENGLISH

Read instructions and check that you have all of the tools and accessories required to complete the installation correctly. Isolate power supply
before starting the installation.

Standard luminaire installation


- 1. Remove the ceiling tile or tiles from the location where you wish to install the LED panel.
- 2. Wire the LED driver to the mains supply as indicated in figure 1.
- 3. Move LED panel into the ceiling aperture and when positioned halfway connect the driver low voltage output to the LED panel (luminaire) as shown in figure 1.a.
- 4. Position the LED panel into place in the grid ceiling.
- 5. Reconnect mains power supply and test for operation.

Important warranty information


Skytile® is Direct/Indirect's supported by a 5 year extended commercial warranty, which must be registered online at jcc.co.uk/warranty. The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis: Product Code/Batch Code.

JC71376DALI Specification: Ra: 80

Wattage: 35 Watts CCT: 4000K

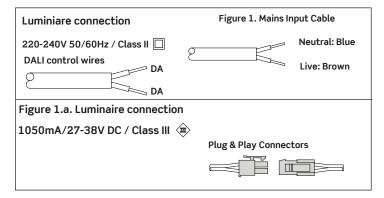

Profile & Dimensions

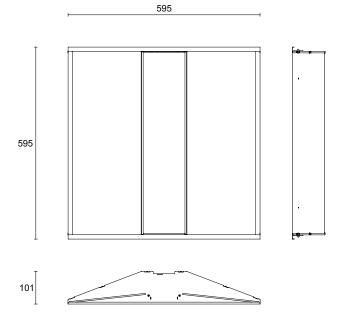

All dimensions in millimetres



JCC.co.uk V1_Jan_2018_KB